

3G card Compatibility List

資料更新日期: 2010/09/02

ID	Card Vendor	Model No.	Interface Type	備註
1	AIKO	81D	USB	
2	AIKO	82D	USB	
3	AIKO	83D	USB	
4	Alcatel	X060	USB	
5	Alcatel	X200	USB	
6	Amoi	V870	USB	
7	Anugrahpratama	Growell GW-1033C	PC Card	
8	AnyData	ADU-500A	USB	
9	AnyData	APE-540H	ExpressCard	
10	AnyData	ADU-635WA	USB	
11	APBW	WH200 II	USB	
12	ASUS	T500	ExpressCard	
13	ASUS	T600	USB	
14	AT&T	Mecury	USB	
15	BandLuxe	C180	USB	
16	BandLuxe	C321	USB	
17	BandRich	BandLuxe C-100	ExpressCard	
18	BandRich	BandLuxe C-120	USB	
19	BandRich	BandLuxe C-170	USB	
20	BandRich	BandLuxe C-270	USB	
21	BES	WM61	USB	
22	C-Motech	CGU-628A	USB	
23	C-Motech	CGU-629	USB	
24	C-Motech	CGU-629C	USB	
25	C-Motech	CHU-629S	USB	
26	C-Motech	XS Stick W12	USB	
27	C-Motech	XS Stick W14	USB	
28	C-Motech	CCU-550	USB	
29	C-Motech	CDC-650	PC Card	
30	C-Motech	D-50	USB	
31	C-Motech	U680	USB	
32	C-Motech	CBU-410S	USB	
33	Cricket	A600	USB	
34	Datang	AirCard901	USB	
35	Datang	DTM5731E	USB	
36	D-Link	DWM-151	USB	
37	D-Link	DWM-152	USB	
38	D-Link	DWM-156	USB	
39	D-Link	DWM-162-U5	USB	
40	D-Link	DWM-168	USB	

41	EpiValley	Model 220	USB	
42	EpiValley	SEC-7089	USB	
43	ESTON	EST-611P	PC Card	
44	ESTON	EST-618U	USB	
45	ESTON	EST-638U	USB	
46	ESTON	501P	PC Card	
47	E-TEL	ET230U	USB	
48	Fly Card	FLY-HU1	USB	
49	Franklin	CGU-628A	USB	
50	Franklin	CGU-629	USB	
51	Franklin	CDU-550	USB	
52	Franklin	CDU680	USB	
53	Giant	D301	USB	
54	Gigabyte	GSMART MD800	ExpressCard	
55	Growell	C803	PC Card	
56	Haier	EM100	USB	
57	Haier	VMW310	USB	
58	Haier	WM100	USB	
59	Haier	WM200	USB	
60	Haier	WM500	USB	
61	Haier	CE100	USB	
62	Haier	CE310	USB	
63	Haier	CM200	USB	
64	Haier	VME110	USB	
65	Haier	HT-DM300	USB	
66	Hisense	E6801	USB	
67	Hojy	733	USB	
68	Hojy	TD368	USB	
69	Honest	UC128	USB	
70	Huawei	D01HW	USB	
71	Huawei	D02HW	USB	
72	Huawei	D12HW	USB	
73	Huawei	D21HW	USB	
74	Huawei	D22HW	USB	
75	Huawei	D23HW	USB	
76	Huawei	D31HW	USB	
77	Huawei	E1152	USB	
78	Huawei	E122	USB	
79	Huawei	E1550	USB	
80	Huawei	E1552	USB	
81	Huawei	E1553	USB	
82	Huawei	E156G	USB	
83	Huawei	E160	USB	
84	Huawei	E160E	USB	

85	Huawei	E160G	USB	
86	Huawei	E161	USB	
87	Huawei	E169	USB	
88	Huawei	E169U	USB	
89	Huawei	E170	USB	
90	Huawei	E172	USB	
91	Huawei	E1750	USB	
92	Huawei	E1756	USB	
93	Huawei	E1762	USB	
94	Huawei	E176G	USB	
95	Huawei	E180	USB	
96	Huawei	E1820	USB	
97	Huawei	E182E	USB	
98	Huawei	E220	USB	
99	Huawei	E226	USB	
100	Huawei	E230	PC Card	
101	Huawei	E270	USB	
102	Huawei	E510	USB	
103	Huawei	E600	PC Card	
104	Huawei	E612	PC Card	
105	Huawei	E620	PC Card	
106	Huawei	E660A	PC Card	
107	Huawei	E800	PC Card	
108	Huawei	K3520	USB	
109	Huawei	K3565	USB	
110	Huawei	K3715	USB	
111	Huawei	K3765	USB	
112	Huawei	E1260	USB	
113	Huawei	EC122	USB	
114	Huawei	EC1260	USB	
115	Huawei	EC1261	USB	
116	Huawei	EC168	USB	
117	Huawei	EC169	USB	
118	Huawei	EC189	USB	
119	Huawei	EC226	USB	
120	Huawei	EC228	USB	
121	Huawei	EC360	PC Card	
122	Huawei	ET128	USB	
123	IPWireless	IPWireless_V1	PC Card	
124	IPWireless	IPWireless_V3	PC Card	
125	IPWireless	IP wireless V2	PC Card	
126	ITON	ITON530C	PC Card	
127	IUSACELL	PC5740	PC Card	
128	KPT	WM66	USB	

129	Kyocera	KPC650	PC Card	
130	Kyocera	1.9G AS	PC Card	
131	Kyocera	IBurst PC card	PC Card	
132	Kyocera	UTC1780DMY-A	PC Card	
133	Kyocera	UTU1900D	USB	
134	Lenovo	SPRD-8800	USB	
135	LightSpeed	EDGE-100M	PC Card	
136	LightSpeed	EDGE-100N	PC Card	
137	LightSpeed	EDGE-180M	USB	
138	LightSpeed	GPRS-100S	PC Card	
139	LightSpeed	HSDPA-180C	USB	
140	Long Cheer	71_11	USB	
141	Long Cheer	C01LC	USB	
142	Long Cheer	C02LC	USB	
143	Long Cheer	D11LC	USB	
144	Long Cheer	D12LC	USB	
145	Long Cheer	D21LC	USB	
146	Matrix	MTX-H25	USB	
147	Maxon	USB3-8521	USB	
148	MLW Telecom	SU-8100U	USB	
149	MLW Telecom	SU-8200	USB	
150	MLW Telecom	SU-8500U	USB	
151	MLW Telecom	SU-8600U	USB	
152	MLW Telecom	SU-9000U	USB	
153	MLW Telecom	SU-6200	USB	
154	Motorola	H24		
155	NEC	D01NE	PC Card	
156	NOKIA	CS-10	USB	
157	NOKIA	CS-15	USB	
158	Novatel	EU850D	USB	
159	Novatel	MC930D	USB	
160	Novatel	MC935D	USB	
161	Novatel	MC950D	USB	
162	Novatel	MC990D	USB	
163	Novatel	MiFi2352	USB	
164	Novatel	NRM-XU870	ExpressCard	
165	Novatel	U530	PC Card	
166	Novatel	U730	PC Card	
167	Novatel	U740	PC Card	
168	Novatel	X950D	ExpressCard	
169	Novatel	ES720	USB	
170	Novatel	MC727	USB	
171	Novatel	MC760	USB	
172	Novatel	U720	USB	

173	Novatel	U727	USB	
174	Novatel	U760	USB	
175	NTT Docomo	L-05A	USB	
176	Onda	DT515HS	USB	
177	Onda	MSA405HS	USB	
178	Onda	MSA501HS	USB	
179	Option	GE0201	ExpressCard	
180	Option	GI0322	USB	
181	Option	Globe Trotter	ExpressCard	
182	Option	GT EXPRESS 7.2	ExpressCard	
183	Option	GT MAX	PC Card	
184	Option	GTM382	USB	
185	Option	GX0201	PC Card	
186	Option	GX0202	PC Card	
187	Option	HSUPA-380P	USB	
188	Option	ICON 225	USB	
189	Option	ICON 401	USB	
190	Option	ICON 431	USB	
191	Option	iCon 515	USB	
192	Option	iCon031	USB	
193	Option	iCon451	USB	
194	Option	iCon452	USB	
195	Option	iCon505	USB	
196	Pantech	PX-500	PC Card	
197	Pantech	UM150	USB	
198	Pantech	UM175	USB	
199	Pantech	UM185AL	USB	
200	Pin Su	EU930	USB	
201	Prolink	PHS100	USB	
202	Prolink	PHS300	USB	
203	Promate	E-GO3	USB	
204	Qsida	Flying Beet(H21)	USB	
205	Quanta Computer	GKD	USB	
206	Quanta Computer	GQR	USB	
207	Quanta Computer	MU-Q101	USB	
208	Quanta Computer	Q110	USB	
209	QuickTel	HM405	USB	
210	Samsung	Z800	USB	
211	Samsung	SGH-H128	USB	
212	SHber	H951	USB	
213	SHber	H955	USB	
214	SHber	H956	USB	
215	SHber	E750	USB	
216	SHber	E751	USB	

217	SHber	E751+	USB	
218	SHber	E752	USB	
219	SHber	E753+	USB	
220	Sierra Wireless	875U	USB	
221	Sierra Wireless	AC501	ExpressCard	
222	Sierra Wireless	AC503	ExpressCard	
223	Sierra Wireless	AC775	PC Card	
224	Sierra Wireless	AC880E	ExpressCard	
225	Sierra Wireless	AC881U	USB	
226	Sierra Wireless	AC885	USB	
227	Sierra Wireless	AirCard 850	PC Card	
228	Sierra Wireless	AirCard 875	PC Card	
229	Sierra Wireless	AirCard 880	PC Card	
230	Sierra Wireless	AirCard 881	PC Card	
231	Sierra Wireless	Compass 885U	USB	
232	Sierra Wireless	Compass 888_889	USB	
233	Sierra Wireless	USB306/USB307	USB	
234	Sierra Wireless	USB308	USB	
235	Sierra Wireless	USB309	USB	
236	Sierra Wireless	595U	USB	
237	Sierra Wireless	598U	USB	
238	Sierra Wireless	AC595	PC Card	
239	Sierra Wireless	AC595DORA	ExpressCard	
240	Sierra Wireless	AC597U	USB	
241	Sierra Wireless	AirCard580	PC Card	
242	SIMCOM	U6-T	USB	
243	SIMCOM	U9R-T	USB	
244	Solomon	D12LC	USB	
245	Solomon	S3GM-646	USB	
246	Solomon	S3GM-660	USB	
247	Solomon	S3GM-690	USB	
248	Solomon	SEGM-520C	USB	
249	Sony Ericsson	MD300	USB	
250	Sony Ericsson	MD400	USB	
251	Sony Ericsson	PC300	PC Card	
252	Sprint	U598	USB	
253	Sprint	U760	USB	
254	Tactio	MD72U	USB	
255	TeleWell	TW-3G	ExpressCard	
256	Telit	UC864	USB	
257	UTStarcom	C6805	USB	
258	UTStarcom	Q6085(CU189)	USB	
259	UTStarcom	UM100	USB	
260	UTStarcom	UM150	USB	

261	UTStarcom	UM175	USB	
262	Verizon	ES720	USB	
263	Verizon	PC5750	PC Card	
264	Verizon	PC770	ExpressCard	
265	Verizon	UM175	USB	
266	Vodafone	EasyBox	USB	
267	Vodafone	K4505	USB	
268	Vtion	E1916	USB	
269	Vtion	V1810	USB	
270	Vtion	U1916	USB	
271	Webee	Modem Configuration	USB	
272	Yiso	C893	PC Card	
273	Zoom	4593	USB	
274	Zoom	72TRI	USB	
275	ZTE	K3520	USB	
276	ZTE	K-3565-Z	USB	
277	ZTE	MF 110	USB	
278	ZTE	MF100	USB	
279	ZTE	MF320	PC Card	
280	ZTE	MF330	PC Card	
281	ZTE	MF332	PC Card	
282	ZTE	MF620	USB	
283	ZTE	MF622	USB	
284	ZTE	MF626	USB	
285	ZTE	MF627	USB	
286	ZTE	MF633	USB	
287	ZTE	MF633BP	USB	
288	ZTE	MF636	USB	
289	ZTE	MF636 BP	USB	
290	ZTE	MF636+	USB	
291	ZTE	MF636-BKIC	USB	
292	ZTE	MF637	USB	
293	ZTE	MF668	USB	
294	ZTE	AC2726	USB	
295	ZTE	AC2736	USB	
296	ZTE	AC560	USB	
297	ZTE	AC580	USB	
298	ZTE	AC8710	USB	
299	ZTE	MC315+	PC Card	
300	ZTE	MV140B	USB	
301	ZTE	MF637U	USB	
302	ZTE	MU-318	USB	
303	ZTE	MU-350	USB	
304	ZTE	MU351	USB	